


6" CORBEL BLOCK DETAIL

SCALE: 1" = 3"


5/4x6 CEDAR DECK
BOARDS RIPPED TO
SIZE ON TABLE SAW

4X4 CEDAR BEVELED
ON TABLE SAW

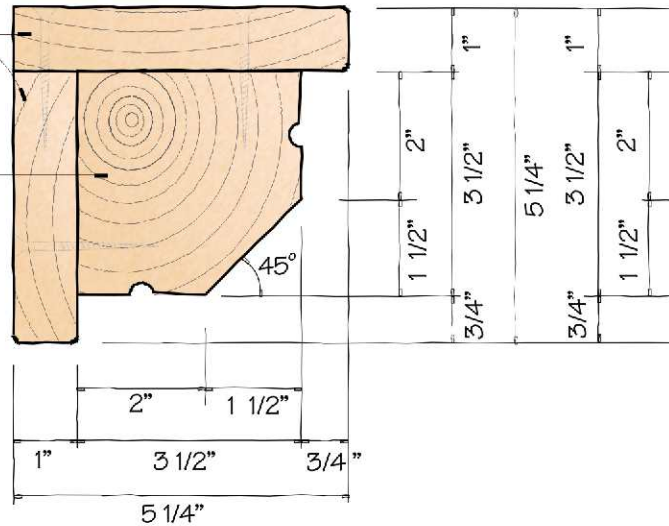

SIDE VIEW

#8 - 2 1/4" WOOD SCREW
4 REQ'D PER CORBELL

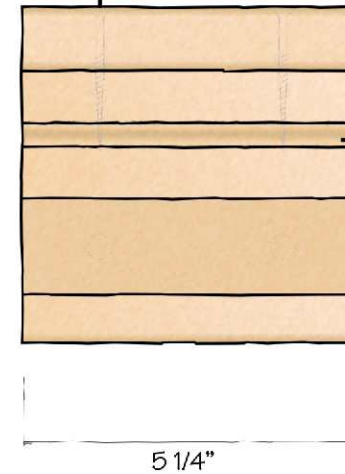

FRONT VIEW

USE 1/2" SPOON BIT
IN ROUTER TO GROOVE

ASSEMBLY TIP:

USE 8' LENGTHS OF MATERIAL, ASSEMBLE FULL LENGTH & THEN CUT TO SIZE ON A CHOP SAW - PAY ATTENTION TO SCREW POSITIONS. YOU GET 16 CORBELLS IN SHORT ORDER

ASSEMBLY STEPS

- ROUT 1/2" GROOVES IN 4X4 USING SPOON BIT IN ROUTER WITH FENCE
- RIP CHAMFER ON 4X4 IN TABLE SAW
- RIP 5/4X6 CEDAR DECK BOARDS TO WIDTH. USING A 5 1/4" WIDTH GETS RID OF THE RADIUS EDGES ON ONE SIDE
- GLUE & SCREW TOGETHER - WATCH THOSE SCREW LOCATIONS
- CUT TO 5 1/4" WIDTHS WITH CHOP SAW
- SAND & FINISH WITH SOLID HIDE STAIN

